

⚠ WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

⚠ AVERTISSEMENT	
• RISQUE D'INGESTION : ce produit contient une pile bouton. • Avaler une pile bouton peut entraîner d'importantes blessures, et même la MORT. • L'ingestion d'une pile bouton peut causer des Brûlures Chimiques Internes en seulement 2 heures. • CONSERVEZ les piles neuves et usagées HORS DE PORTÉE des ENFANTS. • Appelez les soins médicaux d'urgence si vous suspectez qu'une pile a été avalée ou insérée dans une partie du corps.	

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: lithium metal, CR1620.
- Nominal battery voltage: 3.0 V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 158°F (70°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

- Retirez immédiatement les piles usagées ou éliminez-les en accord avec les lois locales. Gardez-les hors de portée des enfants. Ne les jetez pas aux ordures ménagères dans la poubelle domestique. Ne jetez pas de piles dans un feu.
- Même des piles usagées peuvent causer des blessures graves ou mortelles.
- Appelez votre centre antipoison pour connaître le traitement en cas d'ingestion.
- Type de pile : métal-lithium, CR1620.
- Tension nominale de la pile : 3.0 V
- Les batteries non-rechargeables ne doivent en aucun être rechargées.
- Ne forcez pas la décharge ou la recharge des piles. Ne les désassemblez pas. Ne les exposez pas à une température supérieure à 70°C (158°F). Ne les jetez pas dans le feu. Cela peut provoquer des blessures dues à des émanations gazeuses, à des fuites ou à une explosion avec pour conséquence des brûlures chimiques.
- Assurez-vous que les polarités (+ et -) de la pile sont respectées.
- Ne mélangez pas des piles neuves et usagées, de marques ou de types différents tels que carbone-zinc, alcalines, ou rechargeables.
- Retirez puis recyclez ou éliminez immédiatement les piles des équipements qui n'ont pas été utilisés depuis longtemps, en accord avec les lois locales.
- Assurez-vous de toujours sécuriser le compartiment à piles. S'il ne se ferme pas correctement, arrêtez d'utiliser le produit. Retirez les piles et conservez-les hors de portée des enfants.

TIMEX

SSQ DIGITAL REISSUE

[USER GUIDE.....](#) 1

12A-990000-01

Register your product at <https://www.timex.com/product-registration>

WATCH FEATURES:

Time
Date
50 Meters Water Resistance




Important Note : Before setting the date and time, rotate the A button so that the flat side of the button is toward the front side of the watch to enter the Setting mode.

SETTING THE DATE:

To set the date, press the A button twice. The number on the left is the Month. Press the B button to set the correct Month. When finished press the A button to show the Day. Press the B button to set the correct Day. When finished press the A button to enter Time setting mode.

DATE MODE SHOWN BELOW:

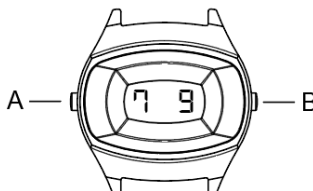

SETTING THE TIME:

To set the time in Setting mode without setting the month and date, press the A button four times until the Hours appear. Press the B button to set the correct Hour. When finished press the A button to show the Minutes. Press the B button to set the correct Minutes. When finished press the A button to finish setting.

After setting the date and time, rotate the A button so that the flat side of the button is toward the back side of the watch to return to Time of Day mode.

BATTERY REPLACEMENT

The watch button cell or coin battery is not intended to be replaced by a consumer. Only a jeweler or other professional is to replace the battery.

EXTENDED WARRANTY

Available in U.S. only. Extend your warranty for an additional 4 years from date of purchase for \$5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1 800-448-4639 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for \$5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.

©2025 Timex Group USA, Inc. TIMEX and INDIGLO are registered trademarks of Timex Group USA, Inc and its subsidiaries.