

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



⚠ AVERTISSEMENT

- **RISQUE D'INGESTION :** ce produit contient une pile bouton.
- Avaler une pile bouton peut entraîner d'importantes blessures, et même la **MORT**.
- L'ingestion d'une pile bouton peut causer des **Brûlures Chimiques Internes** en seulement **2 heures**.
- **CONSERVEZ** les piles neuves et usagées **HORS DE PORTÉE** des **ENFANTS**.
- **Appelez les soins médicaux d'urgence** si vous suspectez qu'une pile a été avalée ou insérée dans une partie du corps.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
 - Even used batteries may cause severe injury or death.
 - Call a local poison control center for treatment information.
 - Battery type: silver oxide SR621SW.
 - Nominal battery voltage: 1.5 V
 - Non-rechargeable batteries are not to be recharged.
 - Do not force discharge, recharge, disassemble, heat above 140°F (60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
 - Ensure the batteries are installed correctly according to polarity (+ and -).
 - Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon zinc, or rechargeable batteries.
 - Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
 - Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Retirez immédiatement les piles usagées ou éliminez-les en accord avec les lois locales. Gardez-les hors de portée des enfants. Ne les jetez pas aux ordures ménagères dans la poubelle domestique. Ne jetez pas de piles dans un feu.
 - Même des piles usagées peuvent causer des blessures graves ou mortelles.
 - Appelez votre centre antipoison pour connaître le traitement en cas d'ingestion.
 - Type de pile : oxyde d'argent SR621SW.
 - Tension nominale de la pile : 1.5 V
 - Les batteries non-rechargeables ne doivent en aucun être rechargées.
 - Ne forcez pas la décharge ou la recharge des piles. Ne les désassemblez pas. Ne les exposez pas à une température supérieure à 60°C (140°F). Ne les jetez pas dans le feu. Cela peut provoquer des blessures dues à des émanations gazeuses, à des fuites ou à une explosion avec pour conséquence des brûlures chimiques.
 - Assurez-vous que les polarités (+ et -) de la pile sont respectées.
 - Ne mélangez pas des piles neuves et usagées, de marques ou de types différents tels que carbone-zinc, alcalines, ou rechargeables.
 - Retirez puis recyclez ou éliminez immédiatement les piles des équipements qui n'ont pas été utilisés depuis longtemps, en accord avec les lois locales.
 - Assurez-vous de toujours sécuriser le compartiment à piles. S'il ne se ferme pas correctement, arrêtez d'utiliser le produit. Retirez les piles et conservez-les hors de portée des enfants.

TIMEX

DIGITAL WORLD TIME WATCH

[USER GUIDE..... 1](#)

WATCH FEATURES:

 
- Time
- Date
- World Time
- 5 Alarms
- Chronograph
- Countdown Timer
- 100 Meters Water Resistance

BUTTON LOCATIONS:



- A -- Reset
 B -- Mode
 C -- EL backlight / -
 D -- Start / Stop / +


DIGITAL DISPLAY LAYOUT:

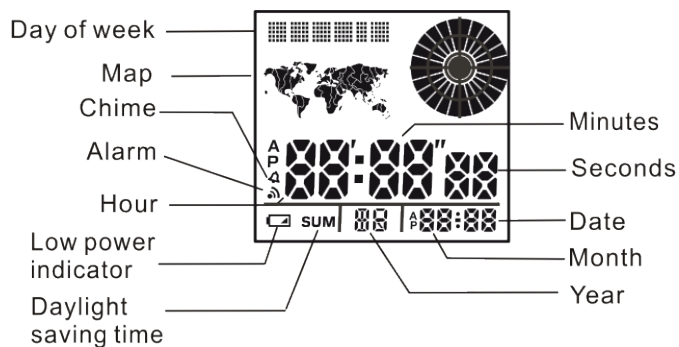

MODE SELECTION


Press "B" to change mode to mode in the following sequence:

 Timekeeping Mode > Stopwatch Mode > Countdown Mode > Alarm Mode > World Time Mode.

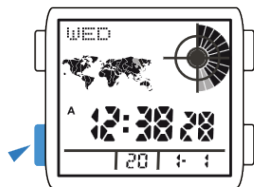


TIMEKEEPING

 - 12/24H Format;
- Hour, Minutes, Seconds, Day of week, Year, Month, Date;
- 100 years Calendar (2000 - 2099).

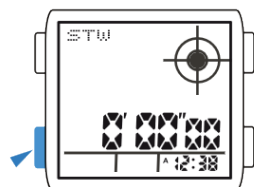


STOPWATCH

 - 1/100 second unit;
- Measuring range: 0'00"00 - 99:59'59"

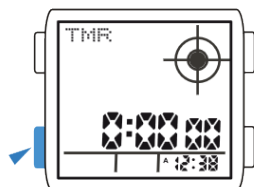


COUNTDOWN

 - Countdown range: 99:59'59" - 0'00"00.

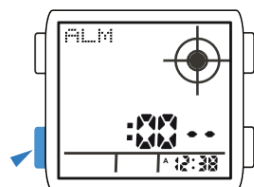

ALARM

 - 5 Alarms:
- Hourly time signal;
- The alarm sounds at the preset time each day

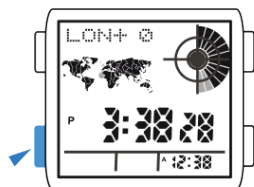



WORLD TIME

- The time for other time zone.

TIMEKEEPING

TIME SETTING

  1. In the timekeeping mode, press and hold "A" until the city code will flash(flashing is indicated in the setting mode);
2. Press "C" or "D" to select the city code, press and hold to adjust at high speed;
3. Press "B" to select the Daylight Saving Time;
4. Press "C" or "D" to turn ON/OFF the Daylight Saving Time
5. Repeat steps 3 and 4, the selection in the following sequence: City code > Daylight Saving Time > Seconds > Hour > Minutes > 12/24H Format > Year > Month > Date > Key Tone(ON/OFF)
6. Press "A" to exit the set state after setting (The day of week is automatically displayed in accordance with year, month and date setting).

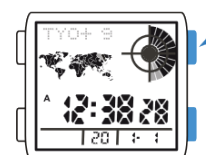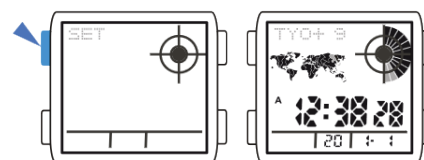


WORLD TIME FORM


City code	GMT Differential	City	Other major cities in same time zone
H11	-11		
HNL	-10	Honolulu	
ANC	-9	Anchorage	
LAX	-8	Los Angeles	San Francisco
DEN	-7	Denver	Edmonton
CHI	-6	Chicago	Mexico City
NYC	-5	New York	Washington, Montreal, Lima
CCS	-4	Caracas	Santiago
RIO	-3	Rio de Janeiro	Buenos Aires
HD2	-2		
HD1	-1		
GMT	+0	GMT	
LON	+0	London	Dublin, Reykjavik, Casablanca, Lisbon
PAR	+1	Paris	Vienna, Brussels, Berlin, Madrid, Rome, Amsterdam, Warsaw, Stockholm
CAI	+2	Cairo	Athens, Jerusalem, Beirut, Damascus, Istanbul, Helsinki
MOW	+3	Moscow	Baghdad, Nairobi, Kuwait
DXB	+4	Dubai	Abu Dhabi
KHI	+5	Karachi	
DEL	+5.5	Delhi	Mumbai, Calcutta
DAC	+6	Dhaka	
BKK	+7	Bangkok	Hanoi, Jakarta
HKG	+8	Hong Kong	Beijing, Singapore, Manila, Taipei, Kuala Lumpur
TYO	+9	Tokyo	Seoul
ADL	+9.5	Adelaide	
SYD	+10	Sydney	Guam
NOU	+11	Noumea	
WLG	+12	Wellington	Auckland

STOPWATCH**LAP TIME**

 1. In the stopwatch mode, press "D" to start the stopwatch;
2. To stop the stopwatch by pressing "D" again;
3. Press "A" to reset the stopwatch.

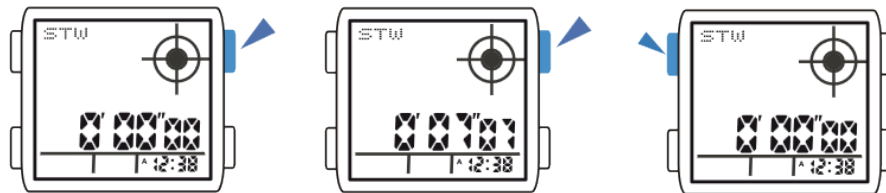**SPLIT TIME**

 1. In the stopwatch mode press "D" to start the stopwatch;
2. Press "A" to display the split time, stopwatch timing continues internally;
3. Press "A" to clear the split time and to continue time measurement:

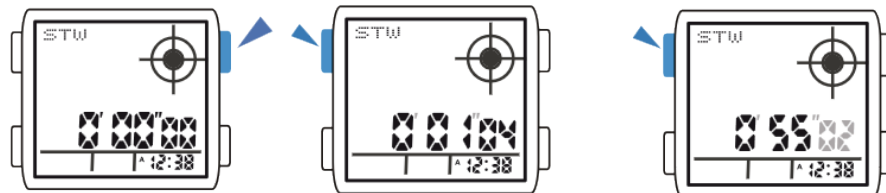


4. Repeat step 2 and 3, you can measure the multi split time:
5. Press "D" to stop the stopwatch.

COUNTDOWN

When the countdown reaches zero, the alarm sounds for about 10 seconds and press any button to stop it.


COUNTDOWN TIMER SETTING

 1. In the countdown mode, press and hold "A" until the hour will flash (flashing is indicated in the setting mode);
2. Press "D" to increase the hour, press "C" to decrease the hour, press and hold to adjust at high speed;
3. Press "B" to select the next selection;
4. Press "D" to increase the number, press "C" to decrease the number, press and hold to adjust at high speed;
5. Repeat steps 3 and 4, the selection in the following sequence: Hour – Minutes - Seconds;
6. Press "A" to exit the set state after setting

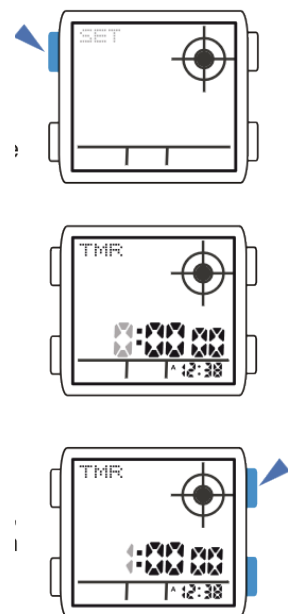

USE COUNTDOWN TIMER

 1. Press "D" to start the countdown timer;
2. To pause the countdown by pressing "D" again.
3. Press "A" to reset the countdown.

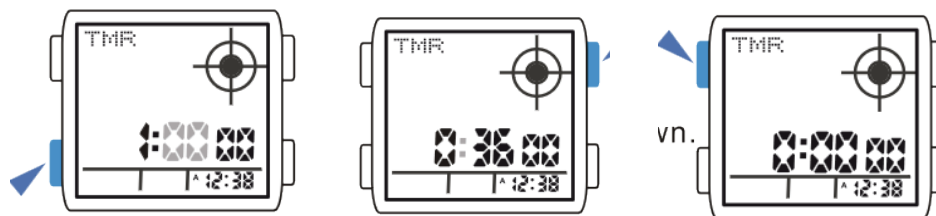


ALARM

The alarm sounds at the preset time each day for about 10 seconds, press any button to stop it.


ALARM AND CHIME

 - In the alarm mode, press "C" to select chime, Alarm1 - Alarm5.
- In the chime state, press "D" to on/off the chime
- In the Alarm1 - Alarm5 state, press "D" to on/off the alarm.

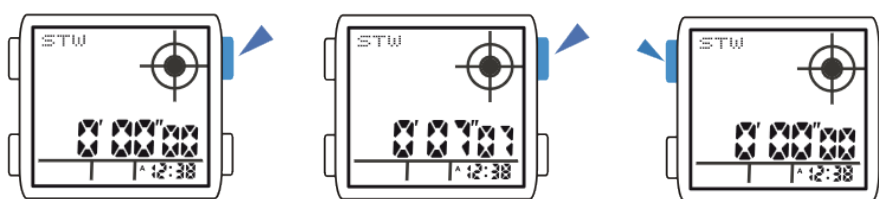


ALARM1 SETTING

 1. In the alarm state, press and hold "A" until the hour will flash, (flashing is indicated in the selling mode)
2. Press "D" to increase the hour, press "C" to decrease the hour, press and hold to adjust at high speed
3. Press "B" to select the minutes
4. Press "D" to increase the minutes, Press "C" to decrease the minutes, press and hold to adjust at high speed;
5. Press "A" to exit the set state after setting.
6. Setting and operation of the Alarm1 - Alarm5 are the same.

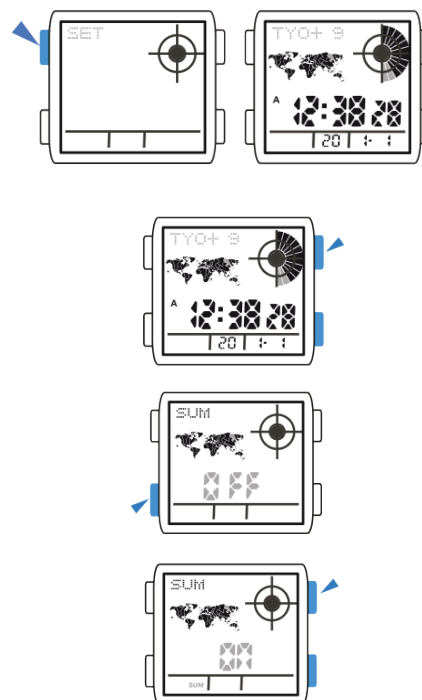


WORLDTIME

 1. In the world time mode, press "C" to forward select the time zone, press "D" to backward select the time zone, press and hold to adjust at high speed;
2. In the world time mode, press and hold "A" to turn ON/OFF the Daylight Saving Time (except "GMT+0").

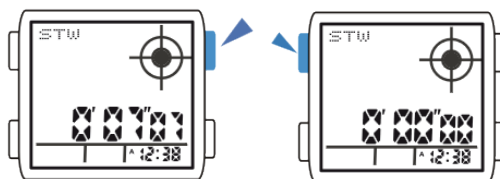


 - In the timekeeping mode, press "D" to select different dials.

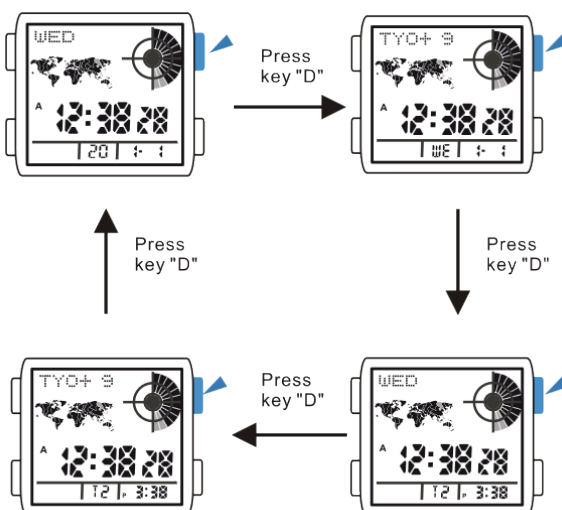

4 dials for user to choose.

 In the timekeeping mode, press and hold "D" to switch to T1 or T2 display.

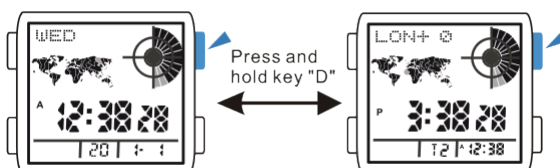

BATTERY REPLACEMENT

When the display dims or no display, please replace with CR2016 or equivalent battery.

EXTENDED WARRANTY

Available in U.S. only. Extend your warranty for an additional 4 years from date of purchase for \$5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1 800-448-4639 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for \$5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.

©2026 Timex Group USA, Inc. TIMEX® and INDIGLO® are registered trademarks of Timex Group USA, Inc and its subsidiaries.