

⚠ WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

⚠ AVERTISSEMENT	
• RISQUE D'INGESTION : ce produit contient une pile bouton. • Avaler une pile bouton peut entraîner d'importantes blessures, et même la MORT. • L'ingestion d'une pile bouton peut causer des Brûlures Chimiques Internes en seulement 2 heures. • CONSERVEZ les piles neuves et usagées HORS DE PORTÉE des ENFANTS. • Appelez les soins médicaux d'urgence si vous suspectez qu'une pile a été avalée ou insérée dans une partie du corps.	

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: lithium metal, CR2025.
- Nominal battery voltage: 3.0 V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 158°F (70°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

- Retirez immédiatement les piles usagées ou éliminez-les en accord avec les lois locales. Gardez-les hors de portée des enfants. Ne les jetez pas aux ordures ménagères dans la poubelle domestique. Ne jetez pas de piles dans un feu.
- Même des piles usagées peuvent causer des blessures graves ou mortelles.
- Appelez votre centre antipoison pour connaître le traitement en cas d'ingestion.
- Type de pile : métal-lithium, CR2025.
- Tension nominale de la pile : 3.0 V
- Les batteries non-rechargeables ne doivent en aucun être rechargées.
- Ne forcez pas la décharge ou la recharge des piles. Ne les désassemblez pas. Ne les exposez pas à une température supérieure à 70°C (158°F). Ne les jetez pas dans le feu. Cela peut provoquer des blessures dues à des émanations gazeuses, à des fuites ou à une explosion avec pour conséquence des brûlures chimiques.
- Assurez-vous que les polarités (+ et -) de la pile sont respectées.
- Ne mélangez pas des piles neuves et usagées, de marques ou de types différents tels que carbone-zinc, alcalines, ou rechargeables.
- Retirez puis recyclez ou éliminez immédiatement les piles des équipements qui n'ont pas été utilisés depuis longtemps, en accord avec les lois locales.
- Assurez-vous de toujours sécuriser le compartiment à piles. S'il ne se ferme pas correctement, arrêtez d'utiliser le produit. Retirez les piles et conservez-les hors de portée des enfants.

TIMEX®

DIGITAL WATCH WITH TIME, STOPWATCH, ALARM

990-096614-01

Register your product at <https://www.timex.com/product-registration>

WATCH FUNCTIONS:

- 12 Digits LCD Display, Display Hour, Minute, Second,
- Month, Day and Week
- Daily Alarm
- Hourly Chime
- 12/24 H format selectable
- 1/100 second Chronograph with split functions
- Night Light

WATCH & BUTTON CONFIGURATION:



Operation Instructions:

1. Time Setting

In normal mode, press Button A (MODE) three times to enter time setting mode (seconds will flash). Press Button C (RESET) to switch the flashing item in the following order: Minutes → Hours → Date → Month → Week. Press Button D (START) to adjust the value when the target item is flashing. Press Button A (MODE) once to return to normal mode.

2. Light Mode

Press Button B (LIGHT) to turn on the light, which will stay on for 3 seconds.

3. Stopwatch Mode

Standard Timing: In normal time mode, press Button A (MODE) once to enter stopwatch mode. Press Button D (START) to start timing, press it again to stop. Press Button C (RESET) to reset to zero. Press Button A (MODE) to return to normal mode.

Split Timing: In normal time mode, press Button A (MODE) once to enter stopwatch mode. Press Button D (START) to start timing. Press Button C (RESET) once to pause and record a split; press it again to show the total split time. Press Button D (START) to stop timing.

Press Button A (MODE) to return to normal mode.

4. 12/24-Hour Format Setting

In normal mode, press Button A (MODE) three times to enter time adjustment state (seconds flash). Press Button C (RESET) twice to enter hour adjustment state, then press Button D (START) repeatedly to switch between 12-hour and 24-hour formats. Press Button A (MODE) once to return to normal mode.

Note: PM is displayed for the 12-hour format (afternoon); AM is displayed for the morning or no symbol.

5. Alarm / Hourly Chime Setting

Alarm Setting: In the normal time mode, press Button A (MODE) twice to enter the alarm mode. The hours will flash. Press Button D (START) to adjust the hours. Then press Button C (RESET) for the minutes to flash. When the minutes are flashing, press Button D (START) to adjust the minutes. Press Button A (MODE) to return to the normal time display.

Alarm On/Off : Press and hold Button C (RESET), then press Button D (START) to switch the alarm on or off. When the alarm is on, an alarm symbol will be displayed. The alarm rings for 1 minute.

Hourly Chime On/Off: Press and hold Button C (RESET), then press Button A (MODE) to switch the hourly chime on or off. When the hourly chime is on, all weekday indicator boxes will be displayed

BATTERY

THE WATCH BUTTON CELL OR COIN BATTERY IS NOT INTENDED TO BE REPLACED BY A CONSUMER. ONLY A JEWELER OR OTHER PROFESSIONAL IS TO REPLACE THE BATTERY.

©2026 TIMEX GROUP USA, INC. TIMEX® IS A REGISTERED TRADEMARK OF TIMEX GROUP AND ITS SUBSIDIARIES.

**TIMEX INTERNATIONAL WARRANTY
[TIMEX.COM/PAGES/WARRANTY-REPAIR](https://www.timex.com/pages/warranty-repair)**